

AIR

Condizioni di funzionamento del compressore		Regime del compressore
---	--	------------------------

Aria Esterna 12 °C / Aria Interna 20 °C	Potenza termica (kW) COP	40,00 4,63
---	-----------------------------	---------------

Aria Esterna 7 °C / Aria Interna 20 °C	Potenza termica (kW) COP	40,00 4,36
--	-----------------------------	---------------

Aria Esterna 2 °C / Aria Interna 20 °C	Potenza termica (kW) COP	35,00 4,00
--	-----------------------------	---------------

Aria Esterna -7 °C / Aria Interna 20 °C	Potenza termica (kW) COP	35,00 3,10
---	-----------------------------	---------------

Aria Esterna -15 °C / Aria Interna 20 °C	Potenza termica (kW) COP	35,00 2,60
--	-----------------------------	---------------

Aria Esterna -20 °C / Aria Interna 20 °C	Potenza termica (kW) COP	30,00 2,35
--	-----------------------------	---------------

Aria Esterna 35 °C / Aria Interna 27 °C	Potenza termica (kW) EER	37,00 4,20
---	-----------------------------	---------------

RISCALDAMENTO

RAFFREDDAMENTO

*** CON KIT BOOSTER (OPTIONAL)**